

Owlie

The magical sleep trainer
Le réveil éducatif magique

Userguide



 
 
 


Contents

	Buttons and Display	p. 3
	Setting the Time	p. 4
	Setting the Alarm - Week/Weekend	p. 5
	Sleep Trainer Function	p. 7
	Nap Mode	p. 9
	Nightlight	p. 10
	Standby Mode	p. 10
	Volume Control	p. 11
	Locking Settings	p. 11
	How to Charge Your Owlie	p. 12
	Reset Button	p. 13



Buttons and Display

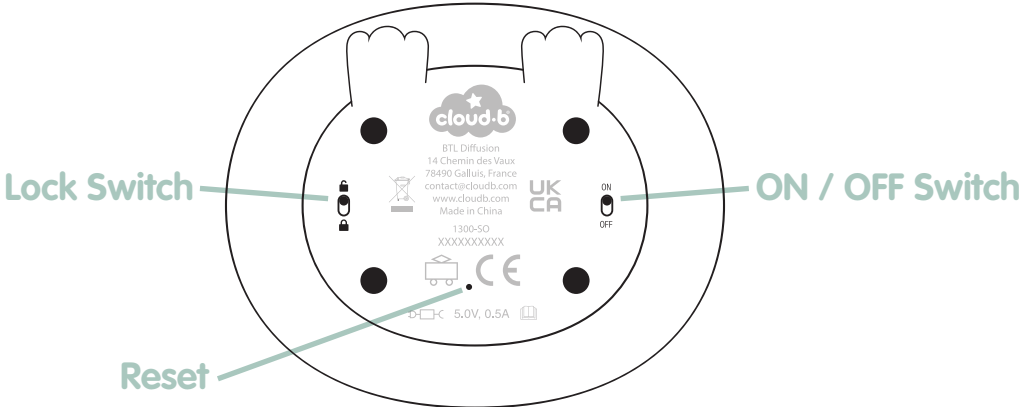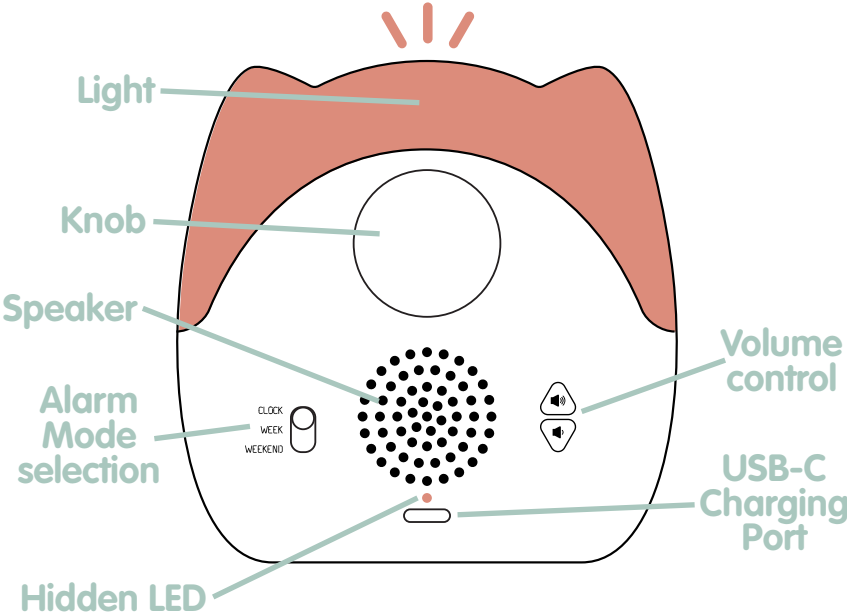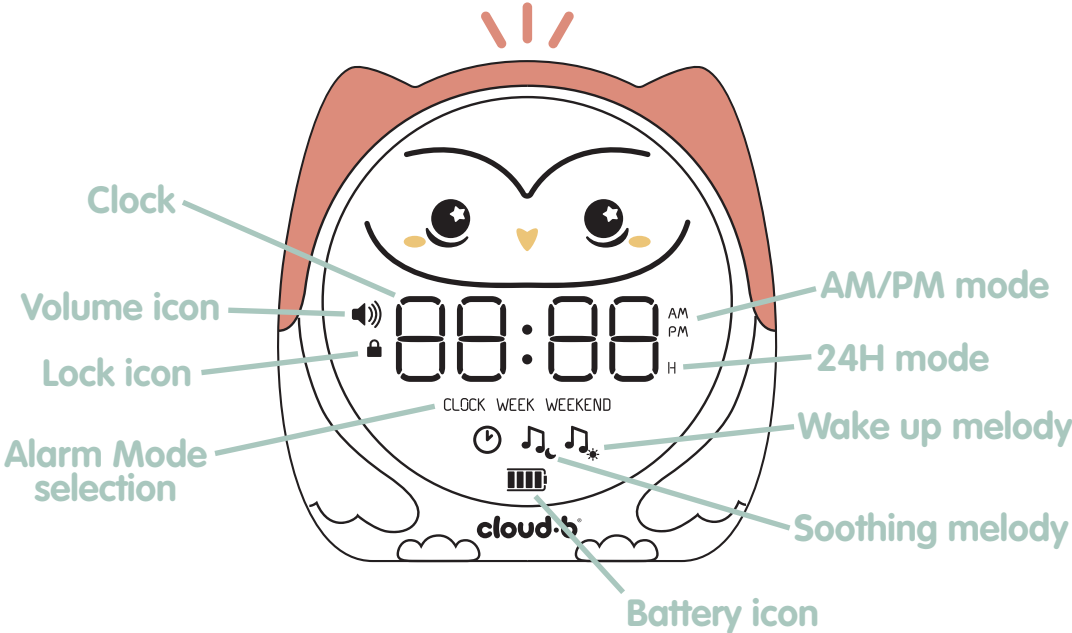



Setting the Time

4



Select "CLOCK" mode on the switch to set the time. Press and hold the green knob for 5 seconds to enter the settings mode.



These 3 icons: AM/PM/H will appear. The selected mode will blink. The  icon blinks when you set the time.



Rotate the knob to change between AM/PM/24H mode. The selected mode will blink. Confirm by pressing the knob.



The display will automatically change so you can set the time. The Hours will blink to indicate they are selected.



Turn the rear knob to change the hour. Once good, confirm by pressing the knob.



Next, the display will change to the minutes. The current minutes will blink to indicate they are selected.



Turn the rear knob to change the minutes. Once good, confirm by pressing the knob.



Next, the 🎵 icon will blink and you can choose a soothing melody for Bedtime. Rotate the knob and listen to options 01, 02, 03, 04, or select OFF if you want NO music.



When you have selected a melody, press the rear knob to confirm your selection.



Setting the Alarm - Week/Weekend



Use the 3-position switch on the rear of Owlle to select "WEEK" or "WEEKEND" to set that Mode.



Press and hold the rear green knob for 5 seconds to enter Setting mode.



Once in Setting mode, 3 icons 🕒 🎵 ⭐ will appear. The 🕒 icon will blink to indicate that you are setting the WAKE UP alarm. The Hours blink to indicate they are selected.



Turn the rear knob to set the hour. Once good, confirm by pressing the knob.




Next, the minutes will blink to indicate they are selected.



Turn the rear knob to set the minutes. Once good, confirm by pressing the knob.



Next, select the soothing melody that will play during bedtime of the mode selected. Rotate the knob and listen to the music selections 01, 02, 03, 04 or select OFF for no music.

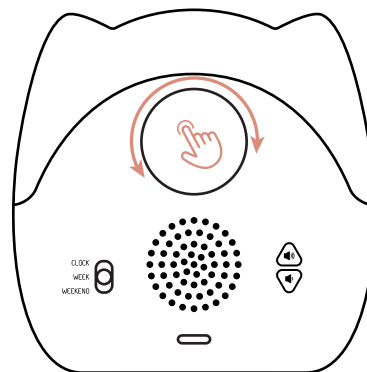

When you have selected a melody, press the rear knob to confirm your selection.



Now you can choose the Wake-Up melody for the alarm. Rotate the knob and listen to the music selections 01, 02, 03, 04 or select OFF for no music. Once selected, confirm by pressing the rear knob.



Sleep Trainer Function

7



On weekday and weekend nights, you will normally use the Bedtime Routine. Set the rear switch to WEEK or WEEKEND and press the rear knob to activate Bedtime Routine.



A red light will illuminate and the Owl will close its eyes. The WEEK or WEEKEND melody you selected will play for 45 minutes.



The Bedtime Routine uses the sleep melody and the Alarm time that you selected when setting either Week or Weekend Mode. To change the settings, follow the instructions under "Setting the Alarm."



If you want to turn off the melody but not turn off Bedtime Routine, tap on the Owl's head. The melody will go off but the red light will stay on. You can reactivate the soothing melody by tapping on the Owl's head again.

..... **NOTE**
Bedtime Routine can be activated at any time. With Owlle, you don't have to set a precise time for Nap time or evening, just activate Bedtime Routine when your child is ready to go to sleep.



If you set an alarm (week or weekend modes), the top of the Owl will illuminate in Orange, 30 minutes before the wake up time.



When wake-up time arrives, the melody you selected will play and the light will change to GREEN. It's time to Wake Up!



The Wake-up melody will play and the light will stay green for 20 minutes. If you want to stop the melody, just tap on the Owl's head.



Press the rear knob to deactivate the light and shut off the alarm melody.

NOTE

In the evening or sleep time, the Owl closes its eyes. The eyes are closed from 8PM/20H until 7AM/7H.



If you want to use the Bedtime Routine without an alarm in the morning, you can switch to CLOCK. In Clock Mode, you can press the rear knob to activate Bedtime Routine, same as Week and Weekend Mode.



A red light will illuminate and the Owl will close its eyes. The CLOCK melody you selected will play for 45 minutes. To change the melody on Clock, follow the instructions under "Setting the Time." In clock mode, the light and melody will not activate when the Alarm time is reached.



Nap Mode



To activate Nap Mode, press the rear knob while in any other Mode (clock, week, weekend). The red LED will light, the eyes will close, and the melody will play for 45 minutes.



The Nap mode uses the sleep melody you selected when setting either Clock, Week or Weekend Mode. Follow the Settings instructions if you want to change any of the melodies.



If you want to turn off the melody but not turn off Nap Mode, tap on the Owl's head. The melody will go off but the red light will stay on for the remainder of the 45 minutes.



You can reactivate the soothing melody by tapping on the Owl's head again.




Press the rear knob to exit Nap Mode. The light and the soothing melody will both shut off.



Nightlight during the night

10

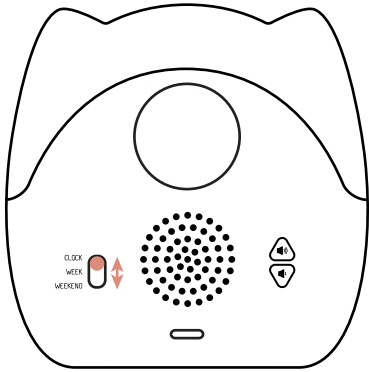

During sleep time, with the Owl in any mode (clock/week/weekend), you can activate a soft soothing nightlight.



To activate the nightlight, simply tap the Owl's head. A red light will illuminate the top of the head for 15 minutes.



To shut the red light off before the 15 minutes are up, simply tap on the Owl's head, again.



Standby mode



Regardless of the mode selected, the screen brightness will slowly dim if you do not touch the Owl for 1 minute.



Tap on the Owl's head to bring the screen back to full brightness.



Volume control




You can adjust the volume between 5 different levels by pressing the two volume buttons on the rear of the Owl.



While you are adjusting the volume, the selected level (01 to 05) will appear on the front screen.



Locking settings

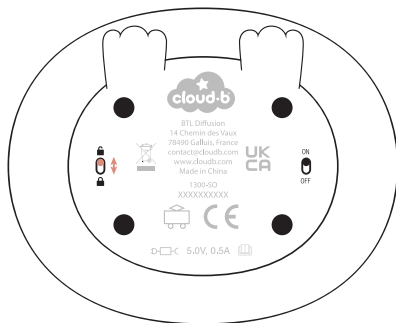

You can lock the settings by using the "Lock" switch on the bottom of the Owl. Move the switch to the "lock" position to make sure no one accidentally changes the settings in any mode.



When you first lock the settings, a "padlock" icon will appear on the front screen. The padlock icon will disappear after 10 seconds.



If you try to change the settings and they are still locked, the padlock icon will appear on the screen and the display will show "LOC." Unlock the settings using the switch on the bottom.




How to Charge Your Owlie


12



When running off the battery, the charge indicator is shown on the screen. Four (4) bars means the battery is fully charged; one (1) bar means the Owlie needs recharged.

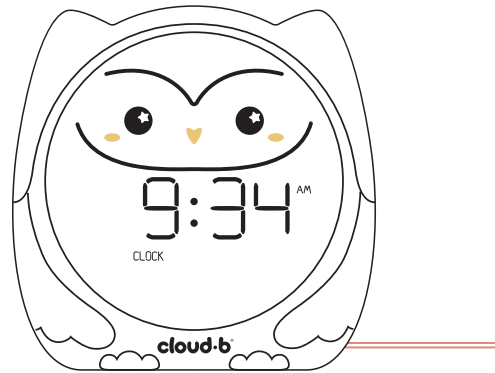

The Owl can be used while it charges; you can also leave it permanently plugged in. The battery icon disappears when the Owl is plugged in.

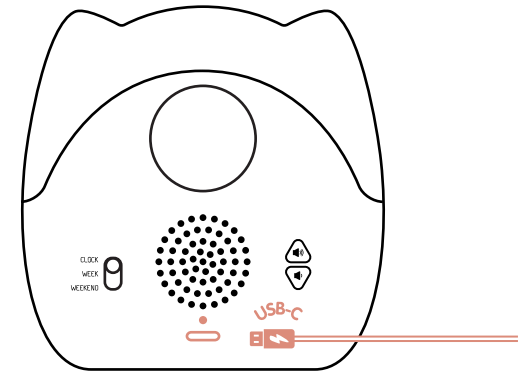

To charge the Owl, plug the included USB to USB-C cable in to a standard USB power source. A red LED illuminates when the Owl is charging.



When the battery gets low, the last bar on the battery indicator will blink. Plug your Owlie back in to recharge the internal battery and protect your custom settings.



If the Owl remains plugged in all evening and Bedtime Mode is activated, the red light will stay on all night long.

NOTES

We recommend that the Owl remain plugged in during everyday use.

Caution: If the Owl is not recharged promptly, your settings may be lost.




Reset Button


13



During normal usage, use the “ON / OFF” switch located on the bottom of the Owl if you need to turn the unit off.

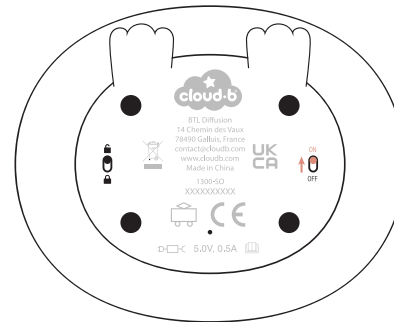

However, if any functions stop working or the unit begins to behave erratically, you might need to “reset” your Owl. Make sure the unit is fully recharged and the power switch is in the ON position.

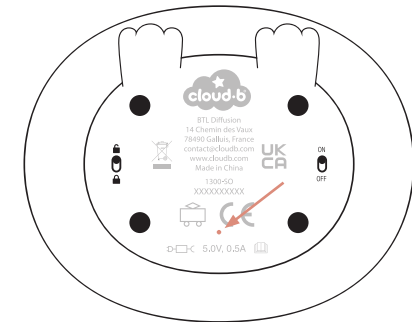

The Owl has a “reset” button hidden in a small round opening on the bottom. To press the Reset button, use a thin, stiff wire (like a paperclip). Insert the wire in the hole and push gently, until the switch is pressed. The Owl will go completely off, which will erase your custom settings, then come back on.




Your Owl should now perform correctly, but you will need to re-enter your settings.

Adult Note: Read the instructions and warnings before use. Product is not intended for use in crib. Do not leave infant unattended with product. Please retain packaging and instruction manual for future reference and contact. Remove any stickers or plastic attachments and discard all small pieces safely. Discard all broken toys. In an effort to continually improve our products, contents may vary slightly from that shown on packaging. Visit www.cloudb.com for warranty information and more safety tips.

⚠ WARNING: Battery is not replaceable. To avoid risk of fire, the Owlle product must only be charged by an external USB power source with an output of 5.0V, 0.5A. Batteries should only be recharged under adult supervision. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting a battery can result in an explosion. Leaving the battery in an extremely high temperature environment can result in an explosion or the leakage of flammable liquid or gas. Do not place flammable materials on top of the Li-ion batteries when charging or it may result in overheating, explosion or fire. Do not throw or drop the Owlle electrical device from a high place. Do not drive a nail into the Li-ion battery, or hit it with a hammer, or step on it with your feet. Do not spill any liquids on the Owlle electrical device. Do not disassemble Li-ion batteries. Regularly examine the supply cord, plug, enclosure and all other parts for damage. In the event of damage, do not use product until any damage is repaired.

⚠ WARNING: The charger, cable, transformer or power supply is not a toy and is only to be used by an adult. Keep away from children. Misuse of transformer can cause electrical shock. This toy is only to be connected to equipment bearing either of the following symbols :

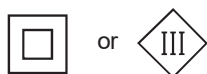

⚠ WARNING: When recharging battery, only use the specified detachable supply unit (5.0v,0.5A). Battery acid leakage can cause personal injury and cause damage to your Cloud b product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes into contact with leaked battery acid. Leaking batteries may make “popping” sounds.

General battery information

Manufacturer:

Dongguan DGT-POWER Co.Ltd.

Postal and Manufacturing Address:

Room 303, No. 2, Shajiao Tou First Street, Qingxi Town, Dongguan City, Guangdong Province, China

Email: Jacen@dgt-power.com

Model: 18650/1800mAh 3.7V

Weight: 44.8g

Capacity: 1800mAh

Chemical Composition: Lithium Ion

Hazardous substances other than mercury, copper, or lead in the battery: None

Fire-extinguishing agents available: dry powder, sand, water

Key raw materials present in the battery in concentrations exceeding 0.1% (weight ratio): Lithium Manganese Oxide, Lithium Hexafluorophosphate, Graphite, Copper, Aluminum, Acetylene Black.

 Batteries and electronic waste (e-waste) contain chemicals and raw materials that should be disposed of at designated recycling collection points, not with household waste. Consumers are legally required to dispose of batteries and electronic waste properly. Reusing, recycling materials, and other forms of recycling batteries and electronic waste significantly contribute to environmental protection. Free battery collection containers are available in stores that sell batteries, from mail-order warehouses, and at local municipal collection points. For disposing of e-waste, please consult your local authority for the suitable collection site. The symbol included notifies the end user of the obligation for proper disposal.

Complies with U.S. and International safety standards EN71, ASTM F-963, Canadian Hazardous Products (Toys) Regulations, CRC c931. Complies with EMC directive.

Copyright covers 3D and 2D artwork, text and photographs. Made In China.

BTL Diffusion, GALLUIS, 78490 FRANCE.

© 2026 BTL Diffusion. All Rights Reserved.

cloudb.com

FCC Compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

